


KWA – ZULU NATAL

T: 031 701 2619

E: natal@mcc-sa.co.za

Unit 7, Marlmead, 4 Reed Place,  
Maxmead, Pinetown, 3610

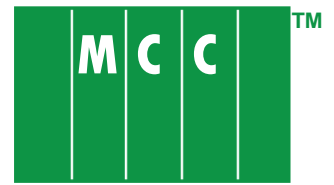

## MULTI CONSTRUCTION CHEMICALS

www.mcc-sa.co.za

## MULTI PU HD SCREED 6-10 mm Polyurethane Floor Screed

### Description

MULTI PU HD SCREED is a rake applied polyurethane floor screed for heavy duty industrial use. Highly chemical, abrasion and impact resistant, with a textured surface for added slip resistance but still allowing hygienic cleanliness and seamless flooring. Supplied in a variety of colours for use in environments that range from back of house to wash bays, warehousing to food processing areas.

### Typical Applications

MULTI PU HD SCREED can be used in food processing plants, cold rooms, canning factories, bottling plants, high foot traffic areas and environments where food safety, wet areas and heavy industrial use are all prerequisites.

### Advantages

- High early strength
- High abrasion resistance
- High chemical resistance
- High impact resistance
- Thermal shock resistance.
- HACCP Compliant.
- Seamless with excellent adhesion.
- Non-slip application
- Low maintenance

### Silver Ion Technology

For HACCP environments, the inclusion of Silver Ion Technology gives the polyurethane screed permanent bactericidal properties. Only included on request



HACCP Approved Antibacterial Agent

### Typical Properties

BS 8204-6	Type 8
Adhesion to Concrete	>1.5 N/mm <sup>2</sup>
Shore D Hardness	80
Slip Resistance Dry	>70
Slip Resistance Wet	>30
Application Temp.	15°C to 20°C
Surface Finish	Textured matt
Application Thickness	6-10 mm
Pot Life	25 Minutes
Use Temperature	-20°C to 90°C
Yield	15 Litres per kit
Coverage	2.5m <sup>2</sup> at 6mm thick
Time to Foot Traffic	12 Hours
Time to Wheel Traffic	24 Hours
Time to Heavy Traffic	48 Hours
Full Chemical Resist.	7 Days
REFER TO CHEMICAL CHART.	

### Watch Points


- While polyurethane screeds are chemically resistant, they can still stain and a sealer coat is recommended in areas where concentrated dyes, or foods or chemicals with staining history are exposed to the screeds for long periods of time
- A formal hygienic cleaning procedure is required to keep the surfaces hygienically clean and food safe.
- Polyurethane screeds are not UV stable and will yellow under bright lighting and sunlight

KWA – ZULU NATAL

T: 031 701 2619

E: natal@mcc-sa.co.za

Unit 7, Marlmead, 4 Reed Place,  
Maxmead, Pinetown, 3610

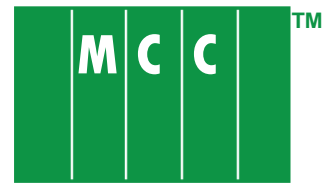

## MULTI CONSTRUCTION CHEMICALS

www.mcc-sa.co.za

## MULTI PU HD SCREED

### Directions for Use

**Application Conditions:** Application temperature should be between 15C and 25C. Employ the use of localized cooling or heating equipment if necessary. Try avoid applying over hot surfaces or previously heated areas. Substrates must have a moisture content of 12% maximum and tensile strength of 1.5 N/mm<sup>2</sup> minimum.

**Surface Preparation:** Surfaces need to be cleaned and flattened or imperfections will show through flow applied applications. Mechanical grinding is required to remove all surface defects. Scabbling and acid etching is not recommended. If the substrate is porous or there is expected to be pin hole issues or moisture concerns, a scraper coat of MULTI PU MB as a primer. Anchor grooves are to be cut at twice the thickness of the floor finish to a maximum of 10mm. Anchor grooves are to be cut around the floor perimeter, parallel to expansion joints, around upright structures, around drains, parallel to door thresholds, and at regular 3 meter spacing across the floor surface.

**Priming:** Use **MULTI PU primer** to prime the floor surface. If moisture is a concern, prime with **MULTI PU MB** coating at 500 µm thickness using a trowel and allow to cure for 12 hours.

**Application:** Shake well the resin components. In a pot mixer, premix the resin and the hardener until mixed together. Incorporate the pigment.

While mixing, add in the powder aggregate gradually until all wetted out and lump free. Then transfer the mix onto the primed surface and level to the required thickness using a steel trowel. Once level, use a spike roller to remove stubborn trowel lines and re-aerate the screed. Do not spike roll beyond initial set (5 minutes of application) or the screed will not self-level and roll marks will remain in the screed. Ensure that anchor grooves are filled completely. Allow the screed to cure for 12 hours. Protect the curing floor from damp, condensation and direct water for at least 24 hours.

**Sealing:** Due to the 7-day full cure duration required, a sealer may need to be applied to protect the surface from premature exposure to staining materials such as grease, oils, rubber and oxidizing agents. One coat of MULTI UV floor before opening to foot traffic.

**Limitations:** Do not apply in humidity is expected to be greater than 90% RH, or if the surface temperature is less than 3C above the dew point. Ensure that the curing temperature never drops below 5C, and do not apply over concrete that is less than 25 MPa compressive strength. Colour variations can occur between batches so apply sections from the same batch of resin. Touching up will always be visible and should be avoided. If necessary, overcoat the entire surface with MULTI PU LC coating or MULTI PU SEALER in a similar colour.

### Equipment Care

All tools should be cleaned with thinners or xylene immediately after use.

### Packing

Supplied in 2.9LT RESIN, 2.1LT HARDENER and 25KG AGGREGATE.

REVISION: R3.1

